

Some games such as: “Friday Night Funkin’”, “Crypt Of The NecroDancer” or “flash Flash Evolution” require gameplay to take place on the keyboard, and do not always have the ability to bind our Dance Pad, so we have prepared a short tutorial that will solve this problem:

1. Download JoyToKey: Go to the JoyToKey website:

<https://joytokey.net/en/download>

and download the installer:

JoyToKey
DOWNLOAD

» Sitemap » Language: Japanese Page

» TOP » Features » TIPS » Download » Purchase License » FAQ » Support

JoyToKey TOP » Download »

DOWNLOAD

- Download
- Beta Version
- Change History

Download JoyToKey

Disclaimer

JoyToKey is a shareware. You can freely download it and evaluate it without any limitation in functionality, but after trial for continued usage, please consider [purchasing a license key](#) from JoyToKey application menu.

This product comes with no warranty. Please use it at your own risk. The author takes no responsibilities of any sort related to the use of this product.

System Requirement

Operating System: Windows 10, 8, 7, Vista

How to Install

Download the installer from one of the links below, and execute it and follow the instructions.

Alternatively, in case you prefer to download JoyToKey in ZIP file format, you can unzip it into any folder you like, and then execute JoyToKey.exe.

NOTE: Some security software may show a warning when you execute JoyToKey.exe downloaded from joytokey.net, but you can safely ignore it. (If you are worried about the warning, you can download JoyToKey from CNET or Softpedia where the binary is double checked against computer virus before distribution)

Download the Latest Version

Latest version of JoyToKey can be downloaded from the following links:


- [Download .JoyToKey installer \(from joytokey.net\)](#)
- [Download .JoyToKey installer \(from Softpedia\)](#)
- [Download .JoyToKey installer \(from CNET\)](#)

In case you prefer the simple ZIP archive format, you can download the file below, and uncompress it and run it from any folder where you have a write permission.


- [Download .JoyToKey in ZIP format \(manual installation\)](#)

For those who have trouble displaying UNICODE arrow characters (such as “←”) on your PC, here is an alternative build which only uses ASCII characters (e.g “LEFT” instead of “←”).

2. Install and Setup JoyToKey: Run the installer and open JoyToKey, this window should pop up:

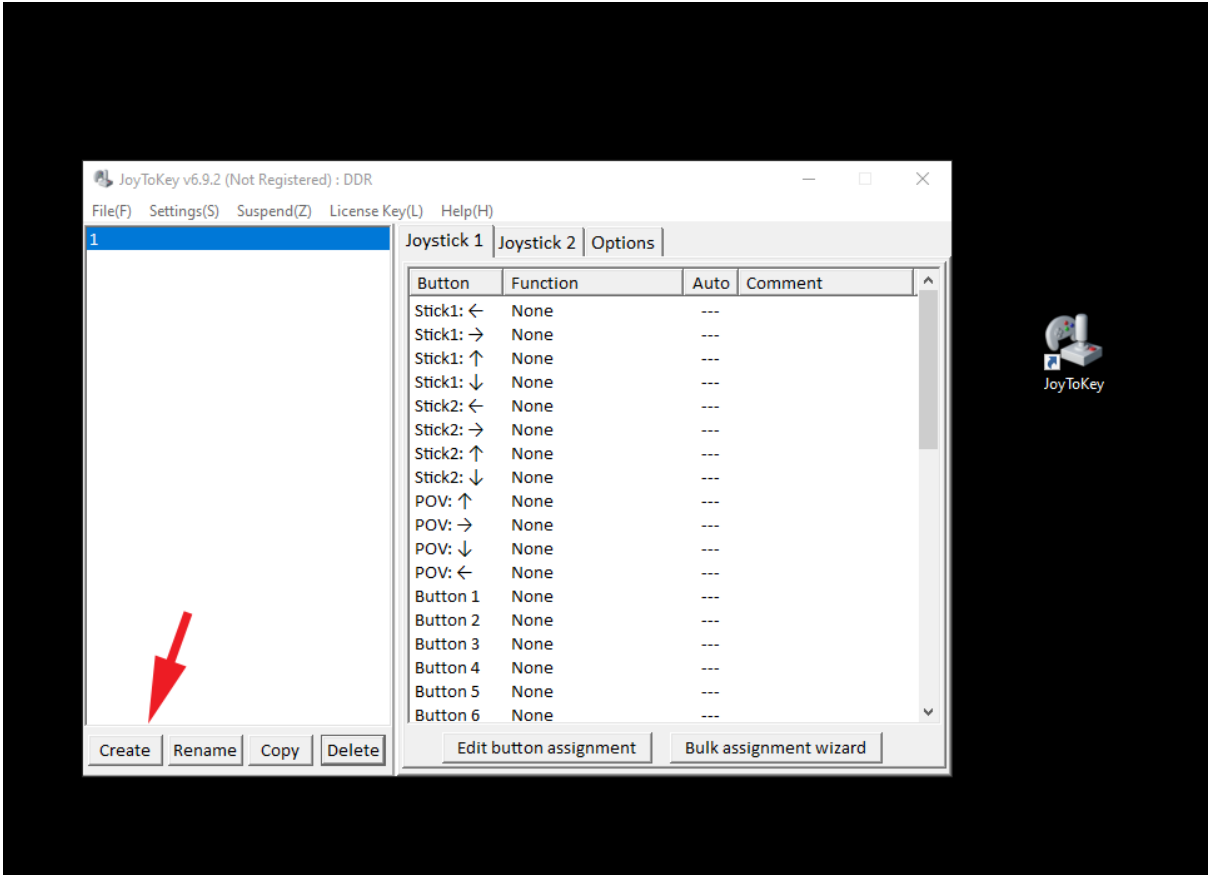



Create a new profile, for example, name it "L-TEK Dance Pad":

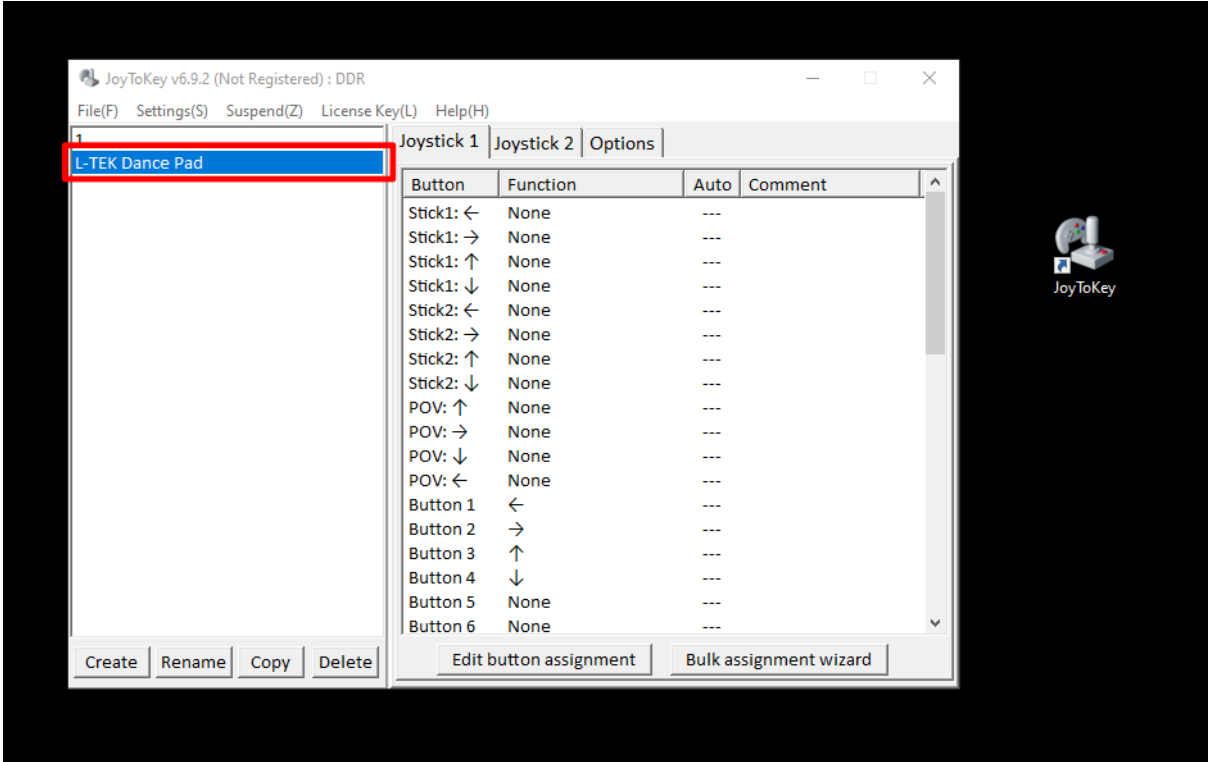



3.Connect Dance Pad to PC: Ensure your dance pad is connected via USB.

4. Assign Buttons to Dance Pad Panels:

- Step on an arrow of the dance pad.
- In JoyToKey, note the highlighted button corresponding to the dance pad arrow.

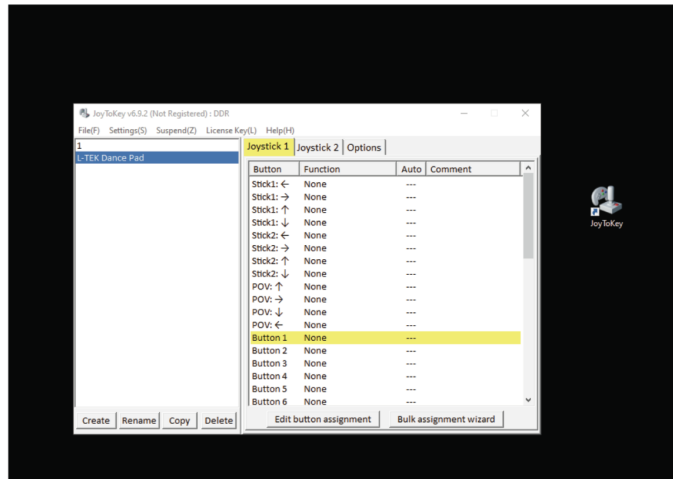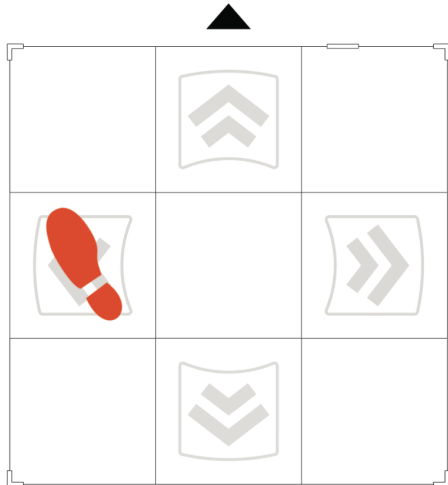

- Click this highlighted button in JoyToKey and assign the corresponding keyboard arrow key.

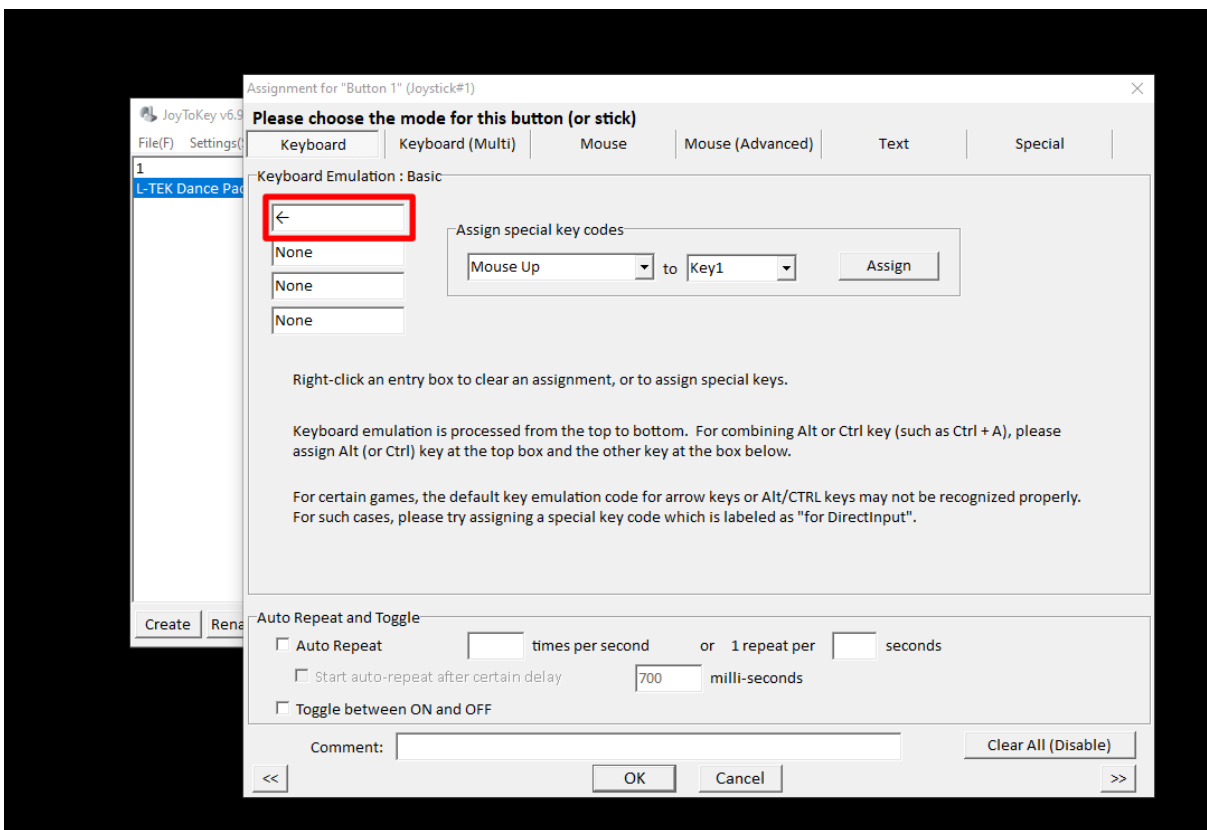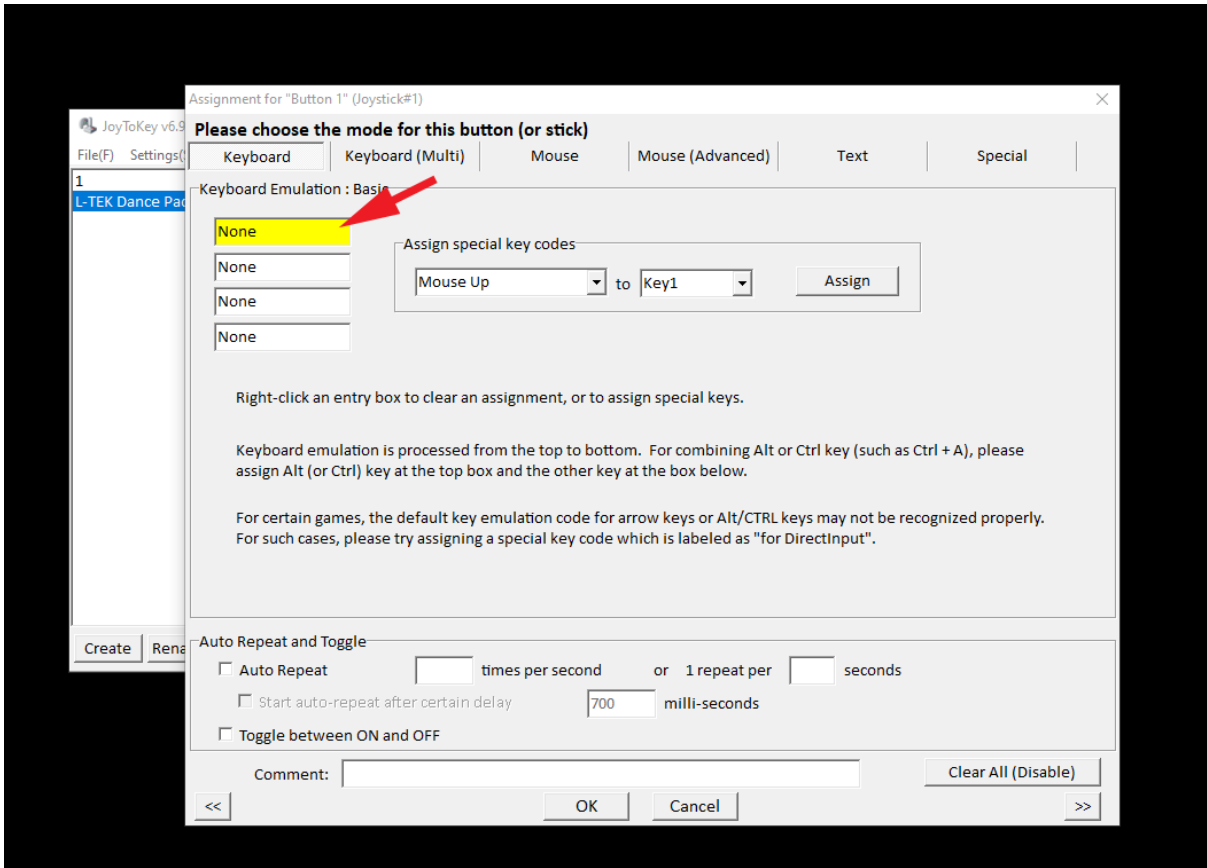

- Click "OK" to save the bind.
- Repeat for all arrows on the dance pad.

if you want to disable binds, simply exit the JoyToKey via the "file">"Exit" button at the top of the software window